



## A Message from the President

Congratulations on purchasing an Anchor Audio sound system, the choice of thousands of satisfied customers including the White House, prestigious universities, school districts nationwide, police and fire departments, and all branches of the U.S. military. Our products are made of the finest materials and built with pride in the U.S.

We've incorporated the latest technology into your sound system yet kept it simple to use. Just take a few minutes to review this manual to ensure the maximum enjoyment of your Anchor system. Or, you can view a demonstration video complete with a trouble shooting section at [www.anchoraudio.com](http://www.anchoraudio.com).

Feel free to call our friendly customer support staff at 1-800-ANCHOR1 Monday thru Friday between 7:00am and 5:00pm Pacific Standard Time with any questions. We love to hear from our customers.

Janet Jacobs, President  
on behalf of all Anchor employees

## CONTENTS

GETTING STARTED / RETURNING SYSTEMS FOR SERVICE/WARRANTY REGISTRATION.....	1
BASIC SYSTEM OPERATION .....	2
BATTERY INSTALLATION .....	3
HAVING TROUBLE WITH YOUR SOUND SYSTEM? / TECHNICAL SPECIFICATIONS .....	4

### GETTING STARTED

Please check your new unit carefully for any damage which may have occurred during shipment. Each Anchor product is carefully inspected at the factory and packed in specially designed boxes for safe transport.

Notify the freight carrier immediately of any damage to the shipping box or product. Repack the unit in the original box and wait for inspection by the carrier's claim agent. Notify your dealer of the pending freight claim.

**NOTE:** All damage claims must be made with freight carrier!

### RETURNING SYSTEMS FOR SERVICE OR REPAIR

For service or repair, please contact the dealer you purchased your system from or Anchor Audio Customer Service at 800.262.4671 to obtain a RA (*Return Authorization*) number. You may also complete an online RA request form at [www.anchoraudio.com](http://www.anchoraudio.com). All shipments to Anchor Audio must include a RA number and must be shipped prepaid. C.O.D. shipments will be refused and returned at your expense.

**IMPORTANT:** Save the shipping box & packing materials, they were specially designed to ship your unit!

### WARRANTY REGISTRATION

Visit our website at [www.anchoraudio.com](http://www.anchoraudio.com) and select "Warranty Registration." Complete the online form to activate the six-year limited warranty on your RescueMAN speaker monitor and two-year limited warranty for the microphones.



SIX YEAR WARRANTY

## BASIC SYSTEM OPERATION

**NOTE: Fully Charge Batteries Before First Use!**

1. Position the RescueMAN with the front/speaker facing toward your audience.
2. Connect Mic-50 microphone to the 1/4" MIC jack
3. Turn the RescueMAN Power/Volume Level knob on, the red POWER LED will light and remain lit during operation.
4. Set the microphone power switch to ON.
5. Adjust the volume with the Power/Volume Level thumbwheel.
6. To record, push "Record" button. Solid red LED light means you can start recording
7. Push "Record" button again to stop recording. Red LED light will turn off. (if you do not press "Record" button to stop recording, it will automatically stop after 28 seconds and red LED light will start flashing.)
8. To play, push "Play" button and the recording will repeat every 10 to 12 seconds. To stop playing, push "Play" again.

## BACK PANEL OF RESCUEMAN





SIX YEAR WARRANTY

## BATTERY INSTALLATION

1. Remove the battery compartment cover located on the back of the RescueMAN by unscrewing the thumbscrew
2. Slide out the battery pack from the RescueMAN battery compartment
3. Insert ten 'AA' size batteries (*alkaline or RC-30 rechargeable batteries*) into the battery pack  
Position the ten batteries into the battery pack by following the polarity labels on the battery pack
4. Slide-in the battery pack into the battery compartment and push the battery pack all the way in
5. Replace the battery compartment cover and tighten the thumbscrew



## RECHARGEABLE BATTERY KIT (OPTIONAL ACCESSORY)

For applications where the RescueMAN PA system is used frequently, the RC-30 rechargeable battery kit is available. This kit includes 10 rechargeable NiMH batteries and an AC charging adapter. When fully charged the batteries provide approximately 12 hours of operation.

NOTE: New batteries must be charged for 6 hours prior to first use.

### Using the RC-30 Recharge Kit

1. Install the 10 rechargeable NiMH batteries into the RescueMAN (see above - Battery Installation)
2. Insert the charger into the Input Jack labeled DC IN on the RescueMAN control panel
3. Plug the AC adapter into a power outlet for 4-6 hours to fully charge

### Cycling the Batteries

For extended battery life, we recommend you fully charge the batteries once each month during periods of infrequent use. Always fully recharge batteries before storing.

CAUTION: NEVER recharge other types of batteries. Doing so can result in battery explosion. Use only rechargeable Nickel-Metal Hydride (NiMH) batteries.



RC-30 Rechargeable Battery Kit

NOTE: System Can Be Used During Charging!



SIX YEAR WARRANTY

## HAVING TROUBLE WITH YOUR SOUND SYSTEM?

CONDITION	POSSIBLE CAUSE
No Sound ( <i>LED off</i> )	<ul style="list-style-type: none"> <li>• turn POWER switch ON</li> <li>• charge batteries</li> </ul>
No Sound ( <i>LED on</i> )	<ul style="list-style-type: none"> <li>• turn microphone switch ON</li> <li>• make sure all cables are completely plugged in</li> </ul>
Distorted Sound	<ul style="list-style-type: none"> <li>• lower system volume control</li> <li>• replace or recharge batteries</li> </ul>
Shortened Battery Life	<ul style="list-style-type: none"> <li>• replace worn NiMH batteries</li> <li>• 'Cycle' NiMH batteries (<i>see page 5</i>)</li> </ul>
Unit Turns Off & Back On During Use	<ul style="list-style-type: none"> <li>• batteries are low and need to be replaced</li> </ul>

### RESCUEMAN TECHNICAL SPECIFICATIONS

Rated Power Output	30 watts	<i>RC-30 – Recharge Kit (optional)</i>	
Max SPL @ Rated Power	109 dB @ 1 meter	Battery Type	10 'AA' size, NiMH 2.5 AH
Frequency Response	100 Hz – 15 KHz +/- 3dB	Charger	AC-30
Speaker Type	4.5 inch neodymium woofer	AC-30 Input	120 VAC, 60Hz, 24 watts max
Battery Type	10 'AA' alkaline	AC-30/220 Input	220 VAC, 50Hz, 10 watts max
Dimensions ( <i>HWD</i> )	5.5" x 5.5" x 6.5" (13.9 x 13.9 x 16.5 cm)		
Weight	2.5 lbs / 1.13 Kg		
Microphone	Lo-Z, 1/4" phone		



(Specifications Subject to Change Without Notice)

**ANCHOR AUDIO CUSTOMER SERVICE**  
**800.262.4671**

**FOR ADDITIONAL INFORMATION**  
**visit [www.anchoraudio.com](http://www.anchoraudio.com)**