

BASIC SYSTEM OPERATION

AN-1000X+ | AN-130+ | AN-135+

1. Position the speaker to face your audience
2. Set volume control on front of speaker to minimum
3. Plug in AC power cord to a wall power outlet
4. Plug a microphone into the Mic Input or an external audio source into a Line In
5. Turn the power switch on the rear panel ON (red LED on front panel should light)
6. Adjust volume, bass, and treble controls to desired levels

SPEAKER MONITOR	INPUTS	OUTPUTS
AN-1000X+	Line In: RCA Line In: 1/4" phone Balanced Input: XLR	Line Out: RCA Speaker Out: 1/4" phone
AN-130+	Line In: 1/4" phone unbalanced Line In: 3.5 mm unbalanced Mic Input: 1/4" phone unbalanced	Line Out: 1/4" phone buffered
AN-135+	Line In: 3.5 mm stereo Line In: 1/4" phone - mono	Line Out: 3.5 mm stereo

AN-30


1. Position the speaker to face your audience
2. Insert the AC power cord to the input labeled DC IN and then plug in to a wall power outlet
3. Connect an external audio source using a 3.5 mm (AUX) cable or 1/4" cable to the Line In.
4. To power on the unit, turn the main system volume knob clockwise, which also controls the wired inputs. Adjust volume as needed.

CONNECTING MULTIPLE SPEAKER MONITORS

	INSTRUCTIONS	RECOMMENDED CABLE
AN-1000X+	To daisy chain these units, simply connect the line out of one unit to the line in of another. Multiple units can be connected using this setup.	SC-50 or SC-50EX
AN-130+		SC-50
AN-135+	When daisy chaining AN-135+ units, a stereo cable must be used to avoid interference. Simply connect the line out of one unit to the line in of another. Multiple units can be connected using this setup.	MINI-15ST
AN-30	When daisy chaining multiple AN-30 units, use a 3.5 mm (AUX) cable. Simply connect the line out of one unit to the line in of another. Multiple units can be connected using this setup.	MINI-15ST

PAIRING ANCHORLINK WIRELESS MICROPHONES

Applicable in AN-1000X+ and AN-130+ with a built-in dual wireless receiver

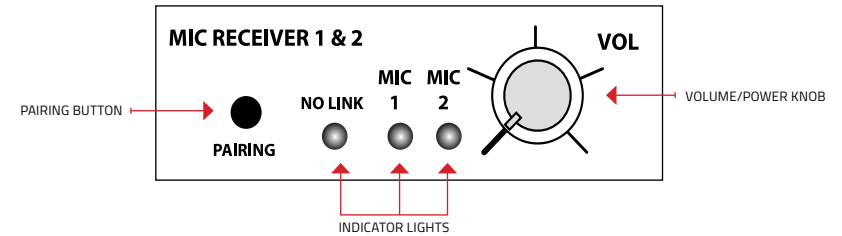

1. Turn on Mic Receiver (Volume knob clockwise) then hold Pairing button until green light for Mic 1 flashes, release button.
2. Turn on Mic then press and hold Mute button until Mic red light turns off, release button.
3. Press and hold Mute button again until Mic green light flashes.
4. The Mic is paired when the green light is solid on both the Mic and Mic Receiver.
5. Repeat these steps for Mic 2 on the same Mic Receiver (Mic 1 will stay paired through this process).

NOTE: You may pair only one microphone at a time. Each Mic Receiver included supports two wireless microphones. One Mic Receiver = Two wireless microphones supported. You will only need to pair your microphone once.

Un-Pair Wireless Microphones

1. Start with the speaker On and the Mic Receiver in the Off position (Volume knob turned counter-clockwise until "click").
2. Press and hold the Pairing button on the Mic Receiver.
3. While holding the Pairing button, turn on the Mic Receiver (Volume knob clockwise).
4. Continue to hold the Pairing button. Lights will appear in the order listed below. Process takes approximately 25 seconds:
 - Mic 2 – Green blinking
 - No Link – Red blinking
 - Pause
 - Mic 1 – Green blinking
 - No Link – Red
5. Once the No Link red light is solid, both Mics have been un-paired.

NOTE: This process un-pairs both Mics from a Mic Receiver. The Mics are not needed to un-pair from the Mic Receiver.

WIRELESS REMOTE CONTROL

Applicable for AN-130RC+. Complete remote instructions included in Owner's Manual online

Remote Control Operation

- Raise volume by pressing the volume up button
- Lower volume by pressing the volume down button
- Mute system by pressing the mute button
- Stop mute by pressing the mute button again or pressing either volume button

Replacing the Remote Control Battery

1. Locate the latch on the bottom of the remote, near the back.
2. Gently pull the latch towards the center of the remote
3. Slide out the battery holder carefully
4. Place a new battery in holder with positive symbol on the battery facing up
5. Carefully re-insert the battery holder

MOUNTING THE SPEAKER MONITORS

	RECOMMENDED BRACKET	INSTRUCTIONS
AN-1000X+	SB-3BK+, SB-360BK+, RM1BK+, or RM12BK+	<ol style="list-style-type: none"> 1. Attach mounting bracket securely to the wall/ceiling with pre-drilled holes. 2. Remove Allen head cap screws from the bracket mounts on the unit. 3. Align the bracket arm with mounting hole on unit. 4. Attach both sides of the speaker securely to mounting bracket.
AN-130+	SB-3W+, SB-3BK+, SB-360W+, SB-360BK+, RM1BK+, or RM12BK+	
AN-135+	SB-3W+, SB-3BK+, SB-360W+, SB-360BK+, RM1BK+, or RM12BK+	
AN-30	SB-30	

HAVING TROUBLE WITH YOUR SOUND SYSTEM?

CONDITION	POSSIBLE SOLUTIONS
No Sound (<i>Power LED: OFF</i>)	<ul style="list-style-type: none"> • Turn POWER knob clockwise to turn ON • Check battery level, charge battery, or plug in AC cord
No Sound (<i>Power LED: ON</i>)	<ul style="list-style-type: none"> • Check your source audio and turn up volume of source audio • Make sure all cables are completely plugged in • Turn up volume control
Wireless Mic will not Connect to System	<ul style="list-style-type: none"> • Check battery level of microphone • Un-pair all microphones from the system then re-pair the microphones
Connected Wireless Mic but No Sound (<i>Solid Green LED</i>)	<ul style="list-style-type: none"> • Check the Mute button on the microphone or belt pack • Raise volume on the microphone and system • Check battery level of microphone and system
Poor Wireless Range / Poor Wireless Audio Quality	<ul style="list-style-type: none"> • Check battery level of microphone and system • Re-position system away from any possible interference sources • Minimize obstructions between the system and wireless microphone • If wireless range continues to be poor, call Anchor Audio Tech Support
Distorted Sound	<ul style="list-style-type: none"> • Check battery level, charge battery, or plug in AC cord • Lower system volume • Lower source audio volume • Wireless belt pack - ensure Mic and/or Line Level setting is correct
Excessive Feedback (Squelching)	<ul style="list-style-type: none"> • Lower the volume on the microphone (handheld or belt pack) • Do not stand within at least 10 feet in front of the speaker with the mic(s)
Excessive Hum or Noise	<ul style="list-style-type: none"> • Use shielded cables • Use a balanced microphone

NEED MORE HELP?
anchoraudio.com | 800.262.4671



QUICK START MANUAL

AN-1000X+ | AN-130+ | AN-135+ | AN-30



100-0329-000 REV A

AN-1000X+ | AN-130+ | AN-135+ | AN-30

For a complete Owner's Manual, visit anchoraudio.com

Please check your new unit carefully for any damage which may have occurred during shipment.

*Please keep the product box(es) that your Anchor Audio product(s) was shipped in, so it is available in the event the product(s) need to be shipped back to Anchor Audio for any reason.