

ANCHOR AUDIO FREQUENCY CHART



American - 16 Channel UHF			
682-698 MHz			
CHANNEL 1	682.375MHz	CHANNEL 9	690.125MHz
CHANNEL 2	683.250MHz	CHANNEL 10	690.750MHz
CHANNEL 3	683.875MHz	CHANNEL 11	691.500MHz
CHANNEL 4	684.875MHz	CHANNEL 12	692.500MHz
CHANNEL 5	685.750MHz	CHANNEL 13	693.625MHz
CHANNEL 6	686.625MHz	CHANNEL 14	694.750MHz
CHANNEL 7	687.500MHz	CHANNEL 15	695.625MHz
CHANNEL 8	688.750MHz	CHANNEL 16	697.125MHz

European - 16 Channel UHF			
863-865 MHz			
CHANNEL 1	863.125MHz	CHANNEL 9	863.250MHz
CHANNEL 2	863.375MHz	CHANNEL 10	863.500MHz
CHANNEL 3	863.625MHz	CHANNEL 11	863.750MHz
CHANNEL 4	864.000MHz	CHANNEL 12	863.875MHz
CHANNEL 5	864.250MHz	CHANNEL 13	864.125MHz
CHANNEL 6	864.500MHz	CHANNEL 14	864.375MHz
CHANNEL 7	864.750MHz	CHANNEL 15	864.625MHz
CHANNEL 8	864.875MHz	CHANNEL 16	864.875MHz

