

Little Big Horn Portable Megaphone Owners Manual

MADE IN USA



A Message from the President

Congratulations on purchasing an Anchor Audio sound system, the choice of thousands of satisfied customers including the White House, prestigious universities, school districts nationwide, police and fire departments, and all branches of the U.S. military. Our products are made of the finest materials and built with pride in the U.S.

We've incorporated the latest technology into your sound system yet kept it simple to use. Just take a few minutes to review this manual to ensure the maximum enjoyment of your Anchor system. Or, you can view a demonstration video complete with a trouble shooting section at www.anchoraudio.com.

Feel free to call our friendly customer support staff at 1-800-ANCHOR1 Monday thru Friday between 7:00am and 5:00pm Pacific Standard Time with any questions. We love to hear from our customers.

Janet Jacobs, President
on behalf of all Anchor employees

CONTENTS

GETTING STARTED	1
OPERATING INSTRUCTIONS	2
INSTALLING BATTERIES / RECHARGEABLE BATTERY KIT	3
TECHNICAL SPECIFICATIONS	4

GETTING STARTED

Please check your new unit carefully for any damage which may have occurred during shipment. Each Anchor product is carefully inspected at the factory and packed in specially designed boxes for safe transport.

Notify the freight carrier immediately of any damage to the shipping box or product. Repack the unit in the original box and wait for inspection by the carrier's claim agent. Notify your dealer of the pending freight claim.

NOTE: All damage claims must be made with freight carrier!

RETURNING SYSTEMS FOR SERVICE OR REPAIR

For service or repair, please contact the dealer you purchased your system from or Anchor Audio Customer Service at 800.262.4671 to obtain a RA (*Return Authorization*) number. You may also complete an online RA request form at www.anchoraudio.com. All shipments to Anchor Audio must include a RA number and must be shipped prepaid. C.O.D. shipments will be refused and returned at your expense.

IMPORTANT: Save the shipping box & packing materials, they were specially designed to ship your unit!

WARRANTY REGISTRATION

Visit our website at www.anchoraudio.com and select "Warranty Registration." Complete the online form to activate the two-year limited warranty on your Little Big Horn.

100-0140-000 04/28

Visit Our Website: www.anchoraudio.com



OPERATING INSTRUCTIONS

The megaphone is activated when the Push-To-Talk switch, located on the hand grip, is pressed and switched off when the switch is released. Speak with your mouth 1/2" to 1" away from the Microphone Mouth Piece. If amplification is not sufficient move closer to microphone. Turn the Volume Control to adjust the sound level without causing howling.

CAUTION: To avoid possible hearing damage do not use megaphone near a person's ears.

LITTLE BIG HORN - LBH-30






INSTALLING BATTERIES

Replace batteries at regular intervals to assure freshness. Drained batteries do not provide sufficient sound volume.

NOTE: Use “C” size 1.5 Volt alkaline batteries.

1. Turn the Battery Compartment Cover counter-clockwise to remove
2. Insert eight type “C” batteries into case – Note correct polarity
3. Replace the Battery Compartment Cover by turning it clockwise until tight – Do not overtighten

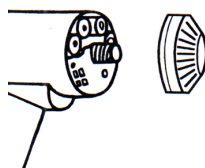

Remove the batteries and store separately when not in use for a long period of time.

CAUTION: Make sure batteries are inserted correctly - observe correct polarity!

SAFETY PRECAUTIONS

- Do not charge batteries for no more than 18 hours.
- Never place your megaphone in strong sunlight or near a heater for an extended period of time.
- When the megaphone is not in use for a long period of time, remove the batteries and store separately.
- Amplified sound or howling may cause damage to people's ears. Do not use this megaphone near the person's ears.
- When cleaning the megaphone body only use neutral detergents. Never use thinner or benzene.

RECHARGEABLE BATTERY KIT (OPTIONAL ACCESSORY)

For applications where the Little Big Horn is used frequently, the RC-LBH rechargeable battery kit is available. This kit includes 8 rechargeable NiCad batteries and an AC charging adapter.

NOTE: New batteries must be charged for 24 hours prior to first use.

Using the RC-LBH Recharge Kit

1. Install the 8 rechargeable NiCad batteries into the Little Big Horn
2. Insert the small charger plug into the Input Jack labeled CHARGER INPUT
3. Plug the AC adapter into a power outlet for 12-18 hours to fully charge (24 hours max. charging time)

RC-LBH BATTERY KIT



Cycling the batteries

For extended battery life, we recommend you fully charge the batteries once each month during periods of infrequent use.

Always fully recharge batteries before storing.

CAUTION: NEVER recharge other types of batteries. Doing so can result in battery explosion. Use only rechargeable Nickel Cadmium (NiCad) batteries.



SIX YEAR WARRANTY

LITTLE BIG HORN TECHNICAL SPECIFICATIONS

Rated Power Output	30 watts
Max SPL @ Rated Power	117 dB @ 1 meter
Range	1,000 feet / 300 meters
Speaker Type	reentrant horn
Battery Type	eight C-size 1.5 volt alkaline (<i>not included</i>)
Average Operation Time	10 – 14 hours (<i>alkaline batteries</i>)
Dimensions	9" dia x 14.5" (23 dia x 37 cm)
Weight	3.3 lbs / 1.5 Kg



(Specifications Subject to Change Without Notice)

ANCHOR AUDIO CUSTOMER SERVICE
800.262.4671

FOR ADDITIONAL INFORMATION
visit www.anchoraudio.com